

# Connector assembly

## UHF-Plug

**AIRCELL<sup>®</sup> 7**


www.d-d-s.nl

**1.**




Cut the cable end perpendicularly

**2.**

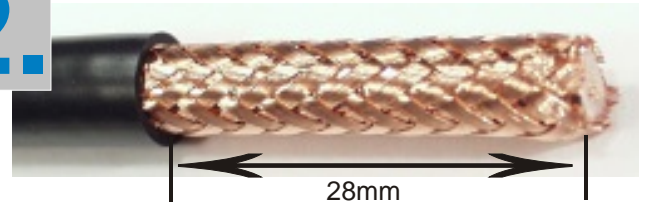

Remove 28 mm of the PVC sheath from the end of the cable with a knife.

**3.**

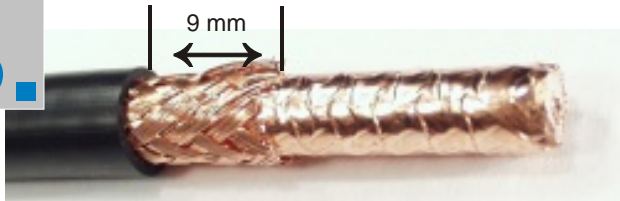


Shorten copper braid to 9mm.

**4.**



Bend copper braid back. Cut foil with a knife and remove completely.

**5.**

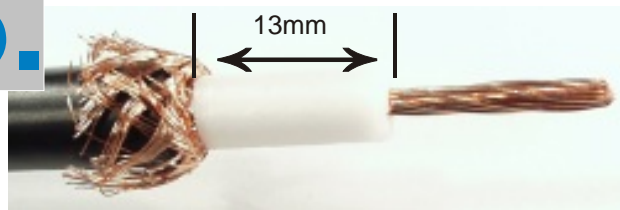

Remove dielectric up to 13 mm.

**6.**




Push connector ferrule over cable end and tighten it by screwing it to stop.

**7.**



Solder center conductor carefully through the little hole..

**8.**

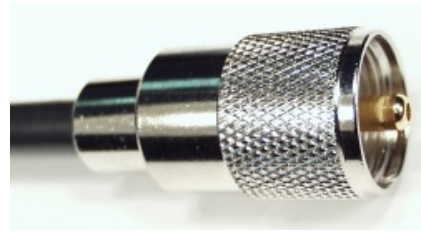

Screw connector housing over the inner part.